



FIGURE 1A

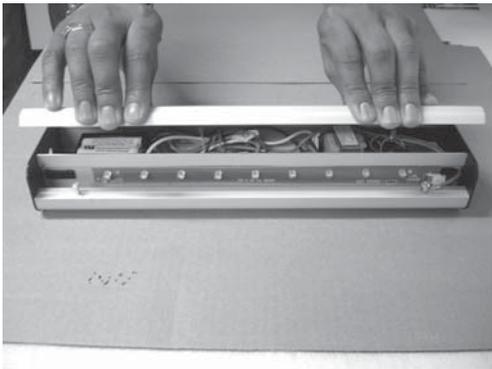


FIGURE 1B

SAVE THESE INSTRUCTIONS!

1. Snap off housing cover (Figure 1A & 1B).
2. Align the screw holes on the panel with the screw holes on the housing (Figure 2).
3. Screw panel into place on housing (Figure 3).
4. Snap housing cover back into place (Figure 4 & 5).



FIGURE 4



FIGURE 2



FIGURE 5



FIGURE 3